
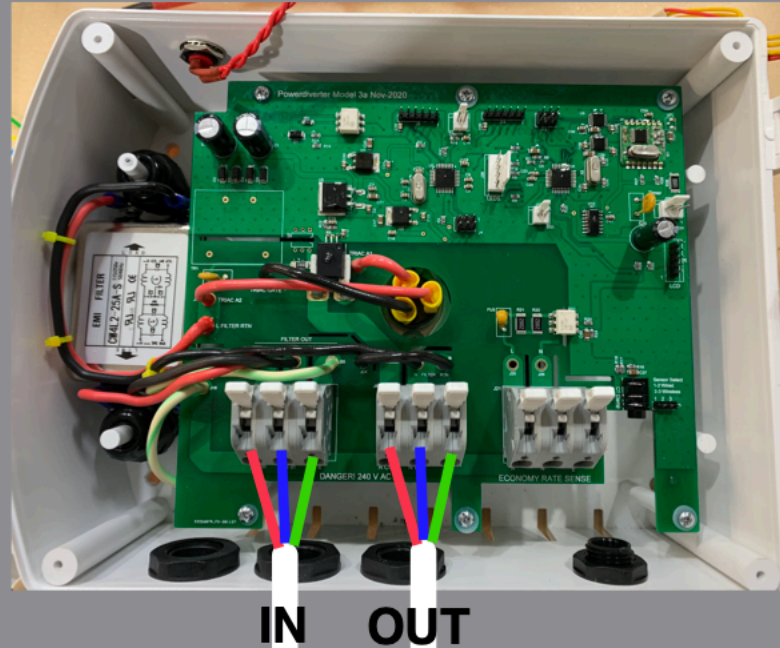


Existing Fused Spur

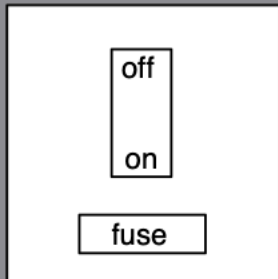

Hot Water Tank

1: Disconnect the cable from the fused spur and connect this cable to the Powerdiverter output.

2: Connect a new cable to the fused spur and the the other end in to the input of the Powerdiverter.

Existing Immersion Heater

