




Quick Install Guide

AUSTRALIA

Model 3



Inputs & Outputs

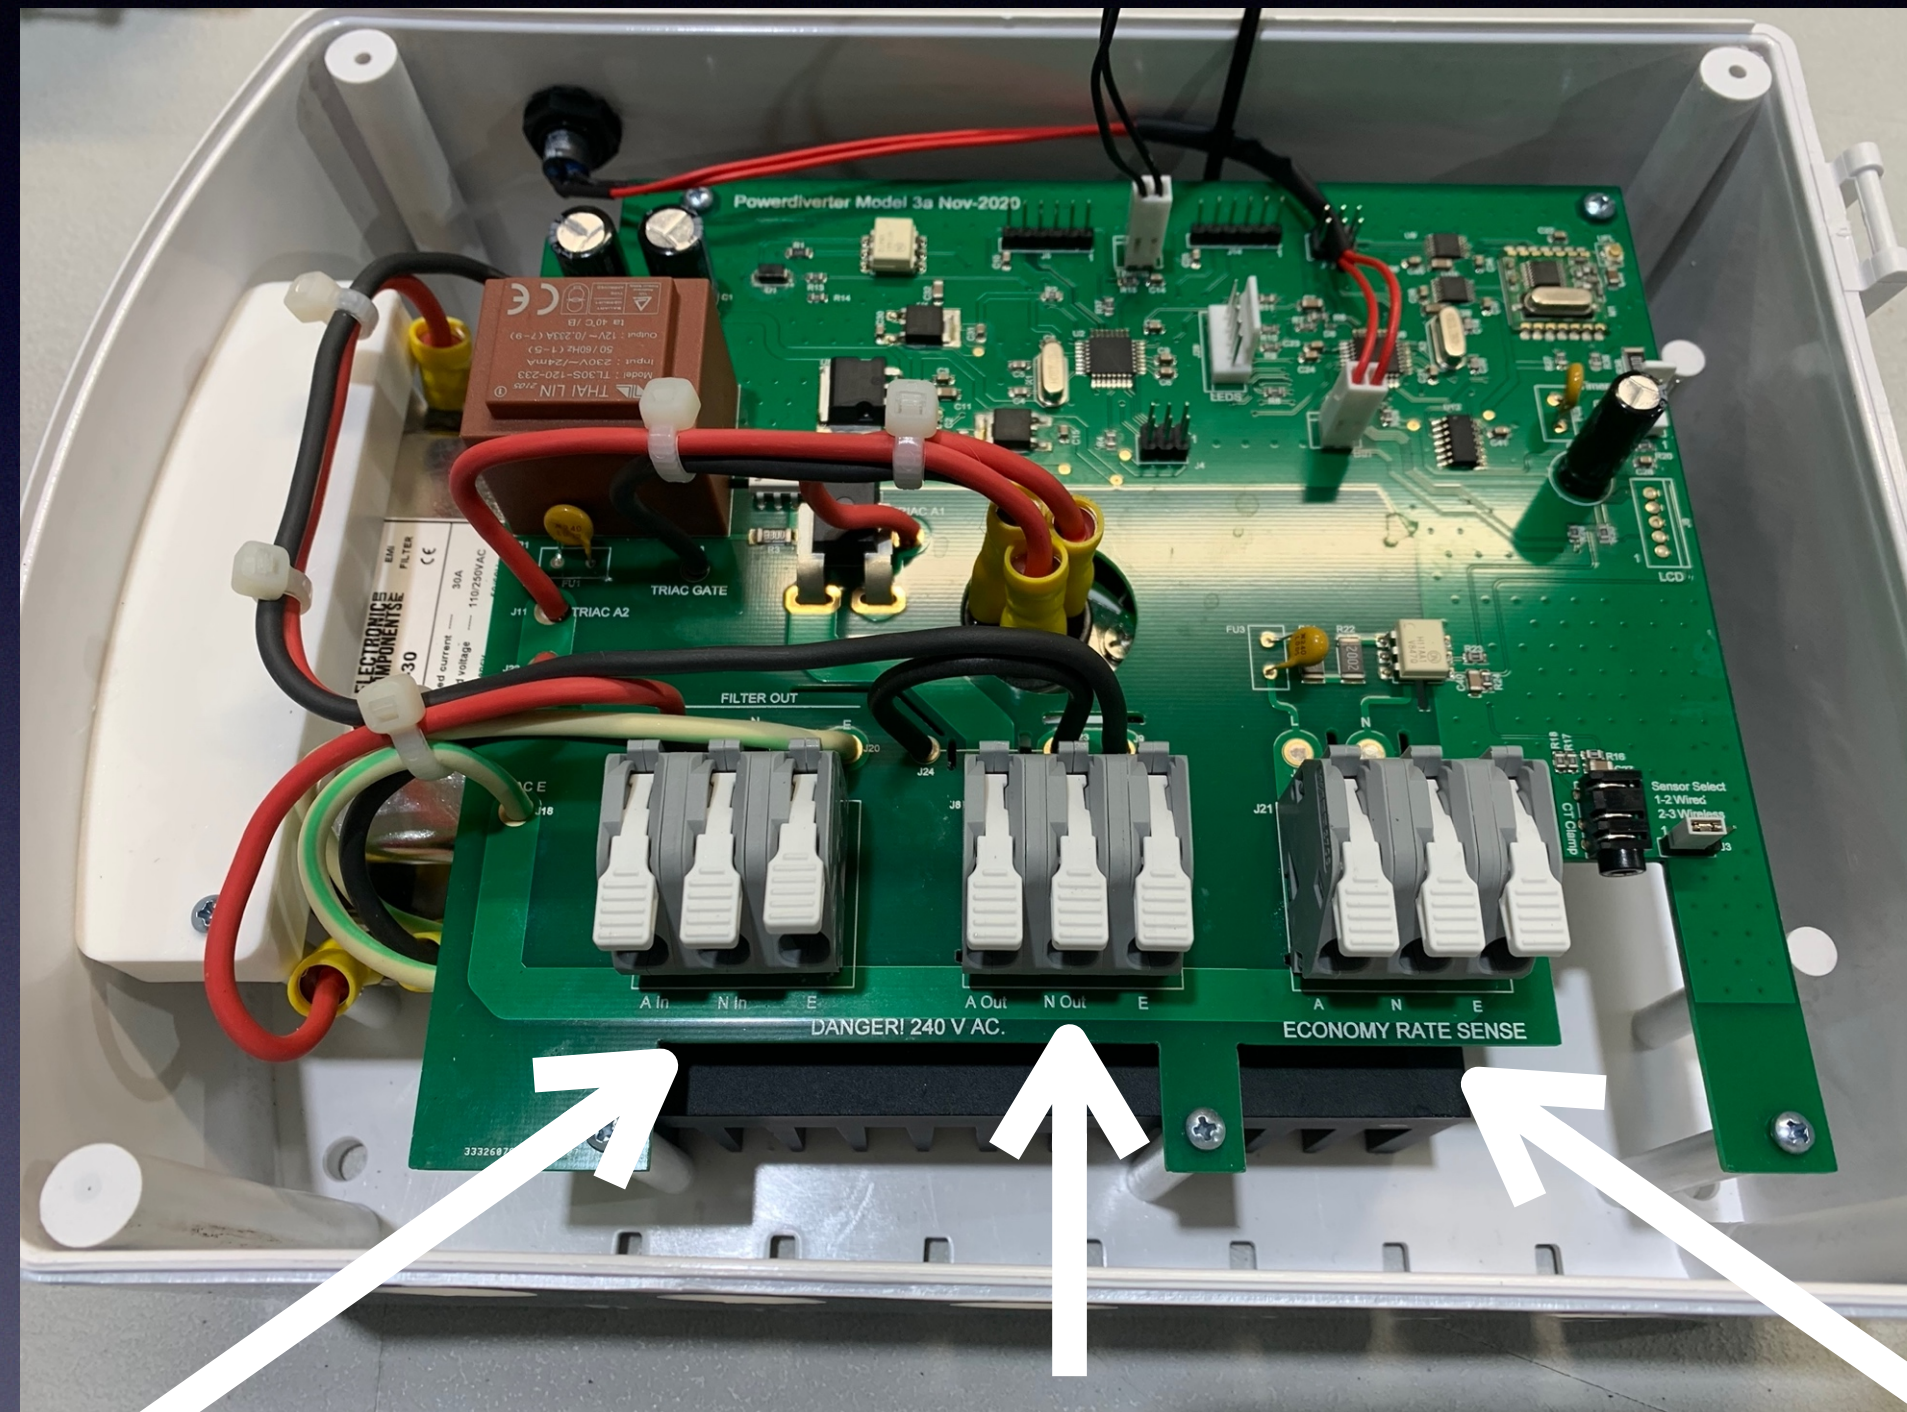


Mains Power
Input

Power Out
Heating Element

Power Sensor
Smart Switching


Hard Wire CT Input

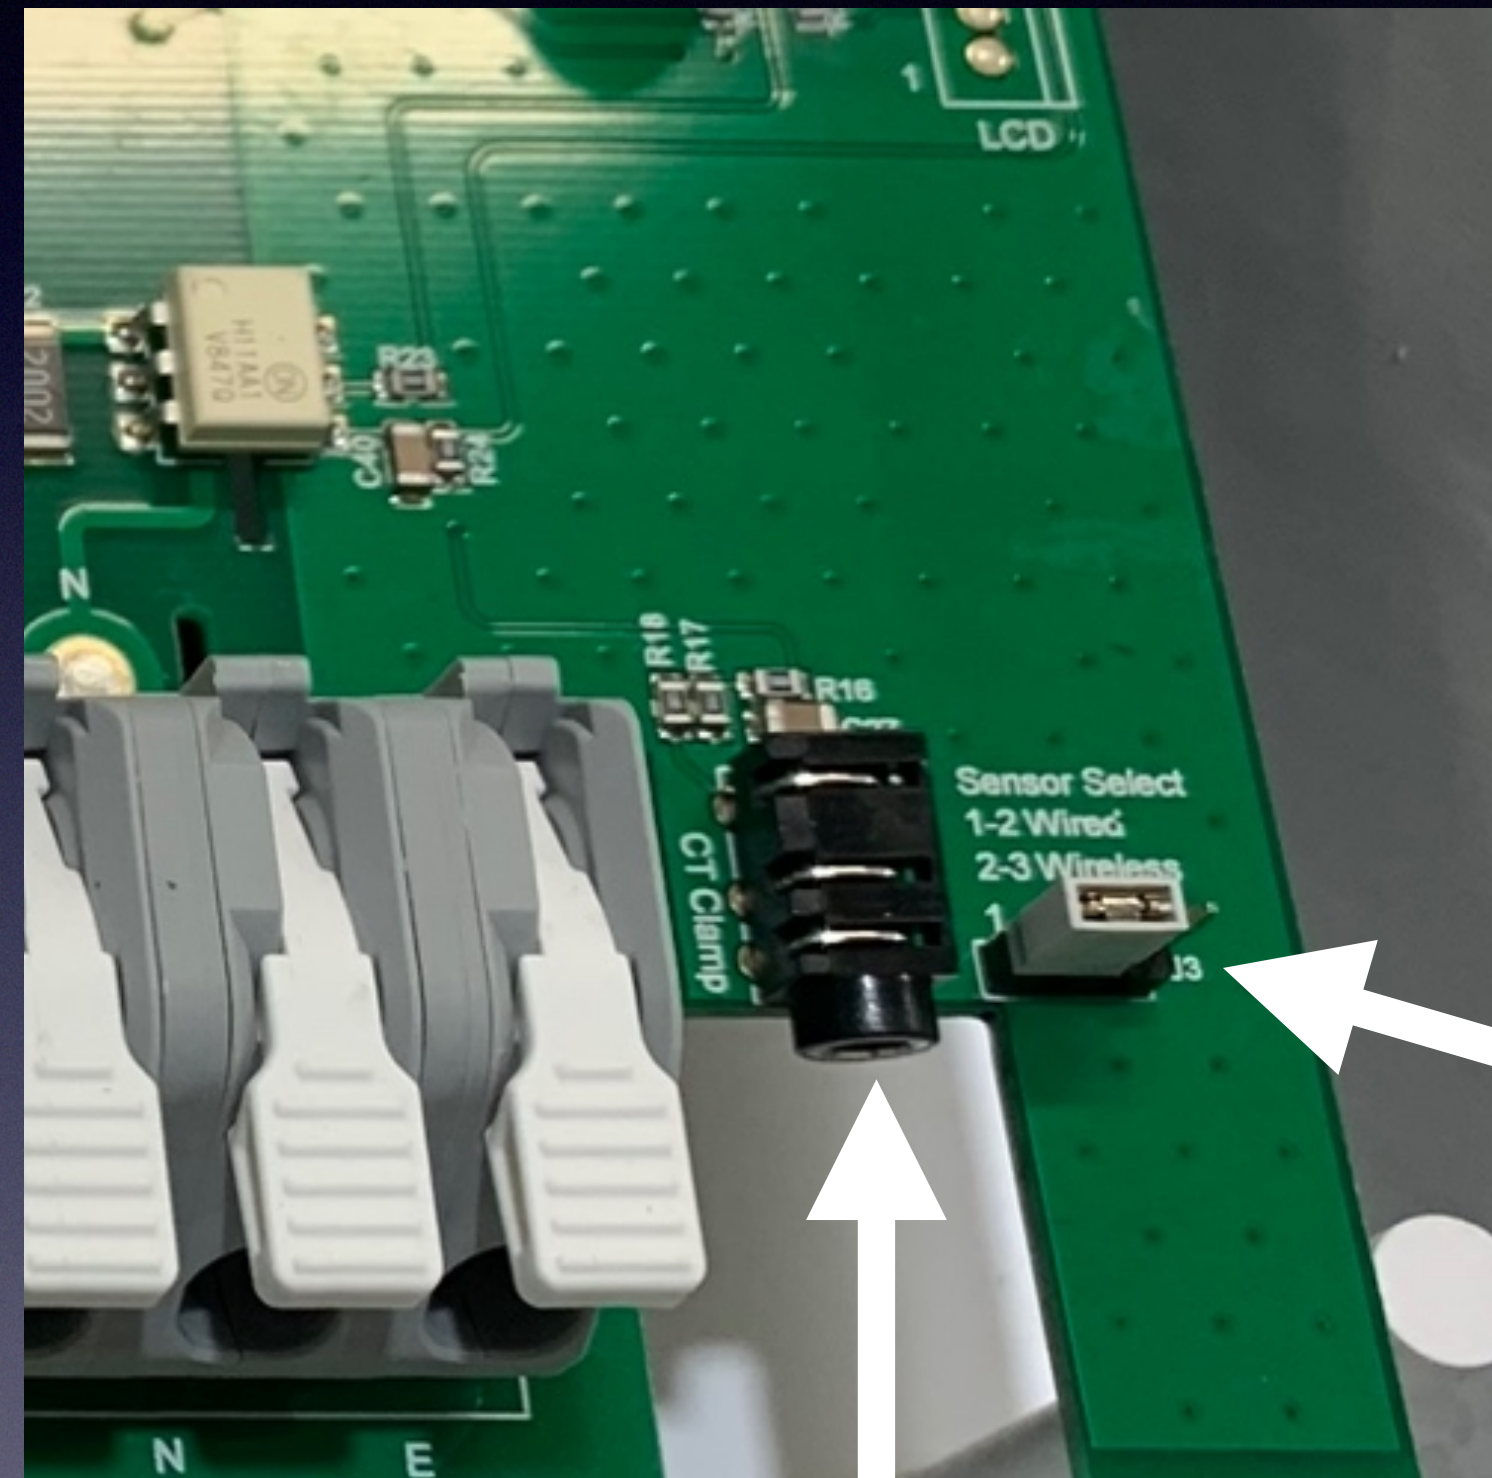

New CT Clamp Input

- New Onboard CT Input
- New and Improved CT Clamps with 5M Cable
- CT Extender Cables Available - 5M
- Jumper should be on Pins 1 & 2 As Shown

Wireless Sensor Option

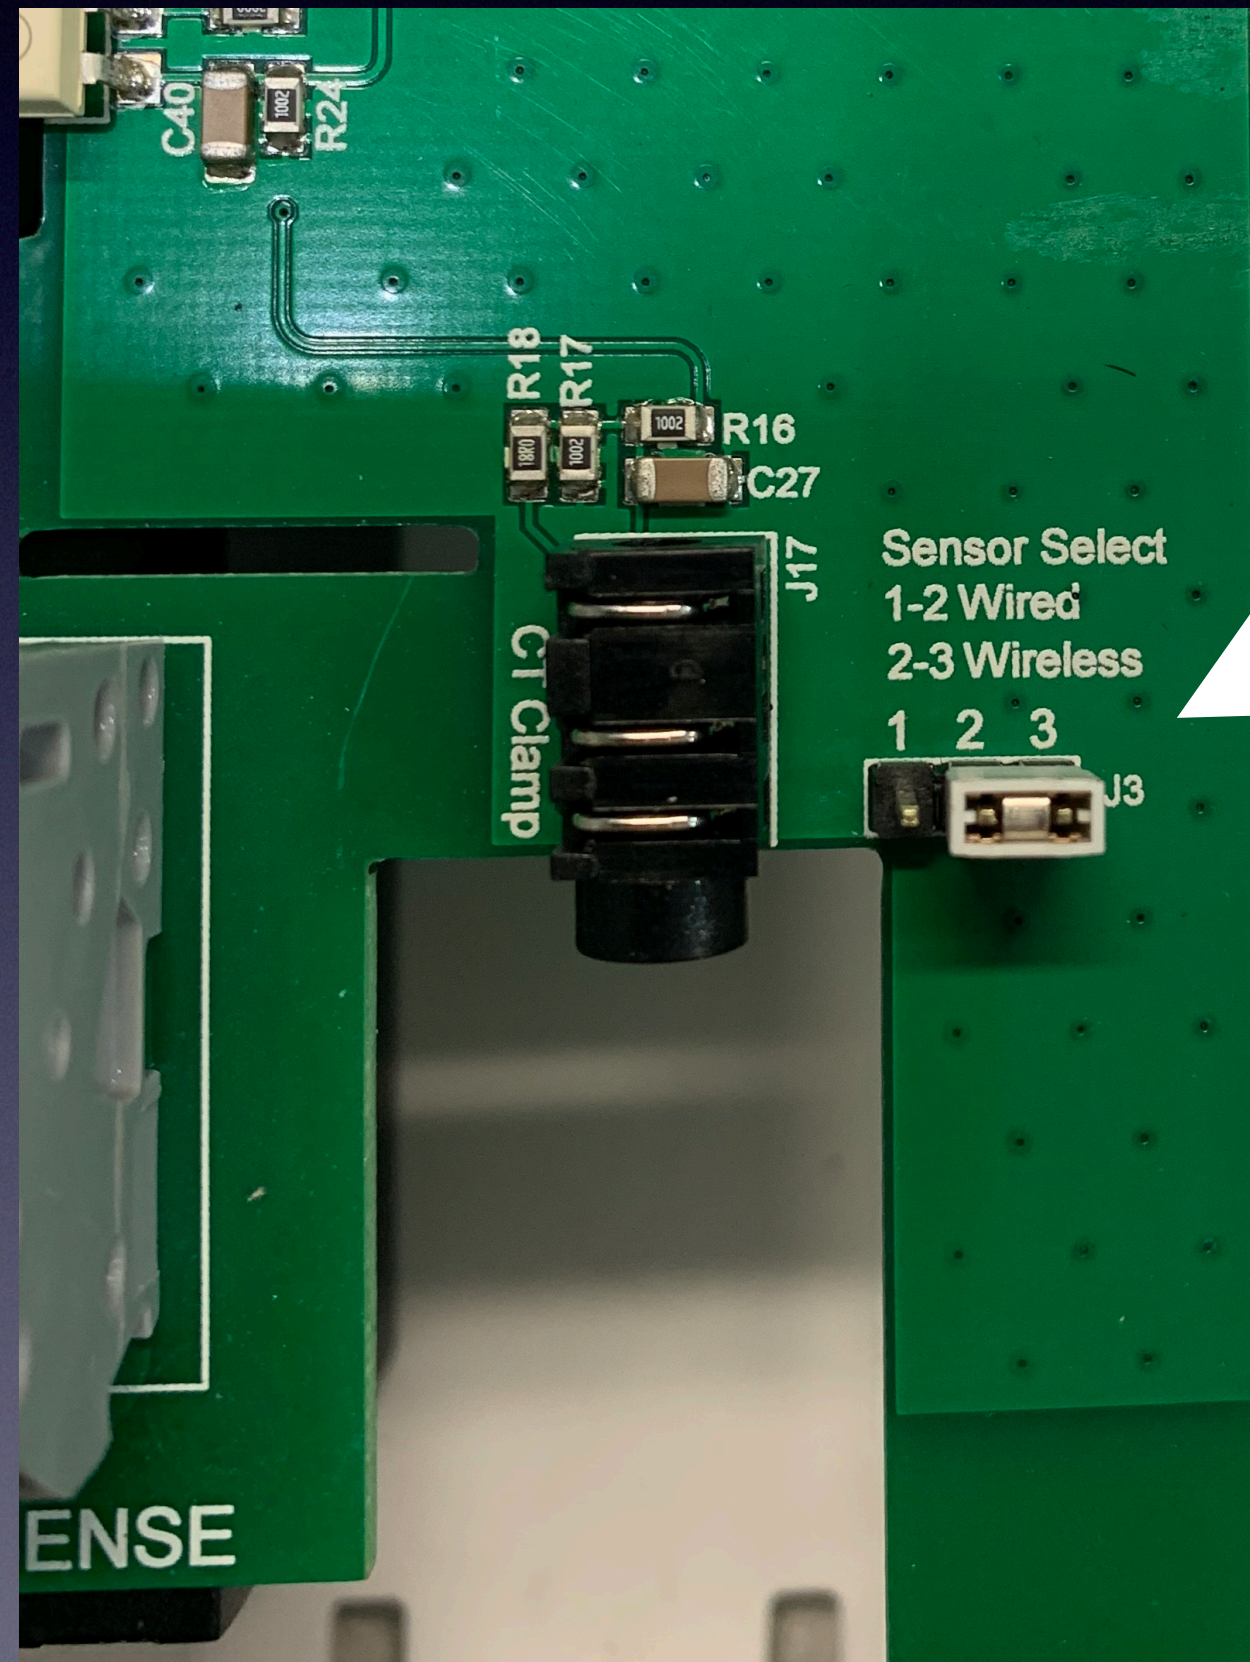

- Turn Power Off
- Put Jumper on to Pins 2 & 3 As Shown
- Make Sure Your CT Is Correctly Fitted Into The Wireless Sensor
- Power Up Wireless Sensor
- Power Up Powerdiverter
- Press and Hold EasyBoost Button Until the Green Light Flashes Rapidly

The Clock

- Unlock Clock By Pressing The C/R Button 4 Times
- The D+ Button Sets the Day
- The H+ Button Sets the Hour
- The M+ Button Sets the Minutes



- P Button Sets Boosting Schedule
- The C Button Resets the Clock
- Use The Manual Boost Button to Either Always On, Auto (Powerdiverter will boost during the Scheduled Periods Selected) or Off which means the Clock Will Not Boost.

Easy Boost

